


Defender Series 2300.1, 2305.1, and 2315.1 Surface Mounted Corner Guards

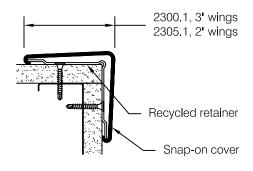


2300.1 and 2305.1

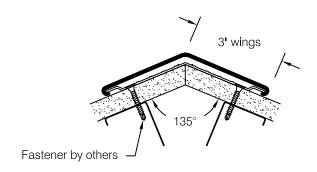

2315.1

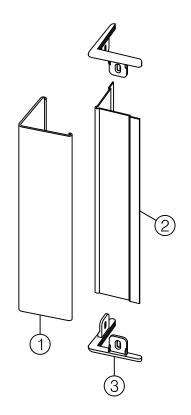

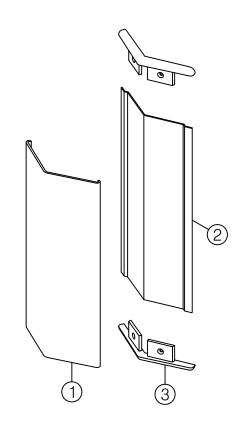

Component Part Numbers:

- 1) Snap-on cover
- 2) Recycled retainer
- 3) Closure Cap



Defender Series 2300.1, 2305.1, and 2315.1 Installation Instructions

Step 1: This series of corner guards is available with molded closure caps. While the installation of a cap at each end is considered standard these corner guards may also be installed with no caps or with a cap at either end, see **fig 1**.

Note: Both the vinyl retainer and snap on cover are pre-cut at the factory and require no further trimming. Refer to the **Cutting Adjustment Diagrams and Schedule** if it is necessary to alter the corner guard length. All cuts must be square and deburred.

- **Important:** Store material in a clean dry place where the temperature is maintained above 50°F (10°C). Walls and rooms should be maintained at a minimum of 65°F (18°C) for at least 48 hours prior to installation. Acclimate materials to normal building conditions for at least 24 hours before cutting and installing.
- Step 2: If installing on masonry pre-drill clearance holes in vinyl retainer for hardware listed below using a #15 (.180") bit for #8 fastener. Locate mounting holes at closure caps and along the vinyl retainer not to exceed 32" on center, see fig 2. If installing on gypsum wall with stud backing proceed to step 3.
- Step 3: Position the vinyl retainer according to the number of closure caps to be used.

 When using top and bottom caps or top cap only: Locate the vinyl retainer 5/16" below the desired overall height of the installed corner guard inclusive of closure caps, see fig 3a.

When using a bottom cap only: Locate the vinyl retainer 5/16" above the desired overall bottom of the installed corner guard inclusive of closure cap, see **fig 3b**.

When using no caps: Locate the vinyl retainer at the desired overall bottom of the installed corner guard, see fig 3c.

Caution: The vinyl retainer for all stock length corner guards is pre-cut to accommodate two closure caps regardless of whether or not they are actually used. As a result the vinyl retainer may be supplied at a length shorter than the snap on cover. To ensure the correct mating of closure caps with vinyl retainer it is necessary to identify and follow the appropriate closure cap installation condition above.

- **Important:** Always make sure there is adequate clearance between closure caps and adjacent construction. If no bottom cap is used the corner guard must contact a surface that will prevent the snap on cover form sliding out of position.
- **Step 4:** Mount vinyl retainer to wall with the appropriate hardware according to wall construction. See **step 5** for fastening at closure caps.

Drywall Installation: Locate mounting holes at closure caps and along the vinyl retainer not to exceed 32" on center, see **fig 2**. If it is necessary to install fasteners in locations where there is no metal backing or stud use pre-drilled vinyl retainer as a template to mark and drill wall for plastic Alligator® insert in accordance with instructions provided with hardware.

Masonry Installation: Using the pre-drilled vinyl retainer as a template, mark and drill the wall at all pre-drilled holes to accept hardware listed below.

Suggested hardware diameter and type:

Drywall with studs
 #8 Drill point sheet metal or drywall screw.

• Drywall without stud or backing: Plastic Alligator® insert with #8 sheet metal or drywall screw.

Drill in accordance with instructions provided with hardware.

Masonry
 Plastic Alligator[®] insert with #8 sheet metal or drywall screw.

Drill in accordance with instructions provided with hardware.

Suggested hardware head style :


To attach closure caps
 Bugle head (drywall screw) or flat head
 To secure vinyl retainer away from closure caps
 Bugle head (drywall screw) or pan head


Step 5: Fasten closure caps in place using bugle head or flat head hardware selected in **step 4**. Hold cap firmly in place against vinyl retainer while tightening.

Step 6: Snap extruded cover in place.



Defender Series 2300.1, 2305.1, and 2315.1 Installation Instructions

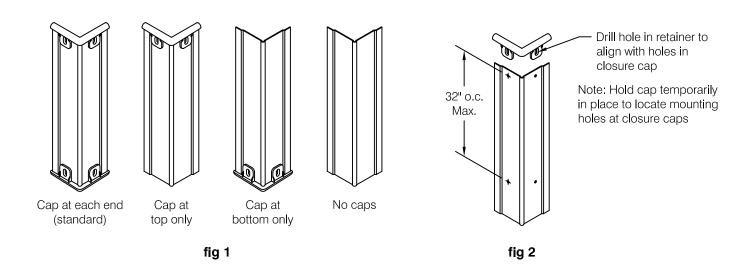

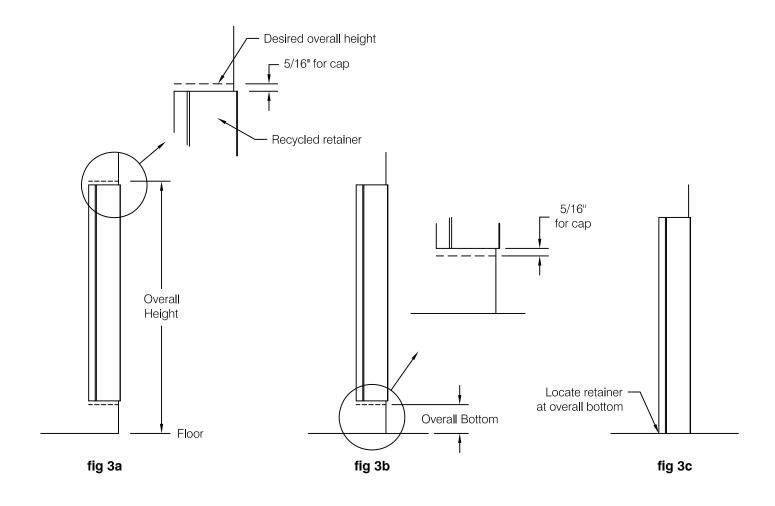


Toll Free Tel: 1-877-WGDOTCOM 1-877-943-6826 Toll Free Fax: 1-877-WGFAXCOM 1-877-943-2926 web: www.wallguard.com email: sales@wallguard.com

WGDC.N2300.1



Cutting Adjustment Diagrams and Schedule

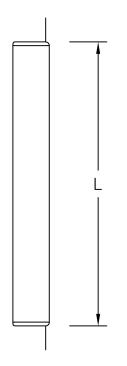



Recycled Retainer & Snap-on Cover


	Two Caps	One Cap (see note 1)	No Caps (see note 1)
2300.1	L - 5/8"	L - 5/16"	L - 0"
2305.1	L - 5/8"	L - 5/16"	L - 0"
2315.1	L - 5/8"	L - 5/16"	L - 0"

Note:

Minimum Layout Configurations

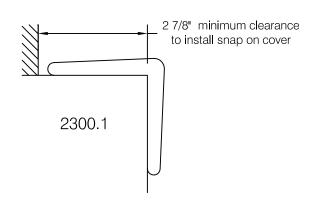

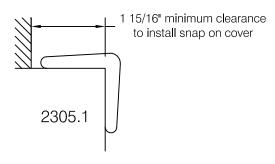

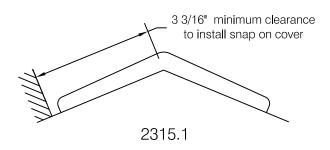

WallGuard.Com reserves the right to discontinue a design or modify an existing design without prior notice

¹⁾ Cut length of recycled retainer for this condition may be less than cut length of cover. Recycled retainer length is acceptable at L - 5/8".