



## Protector Series 2126 - Quik Clip

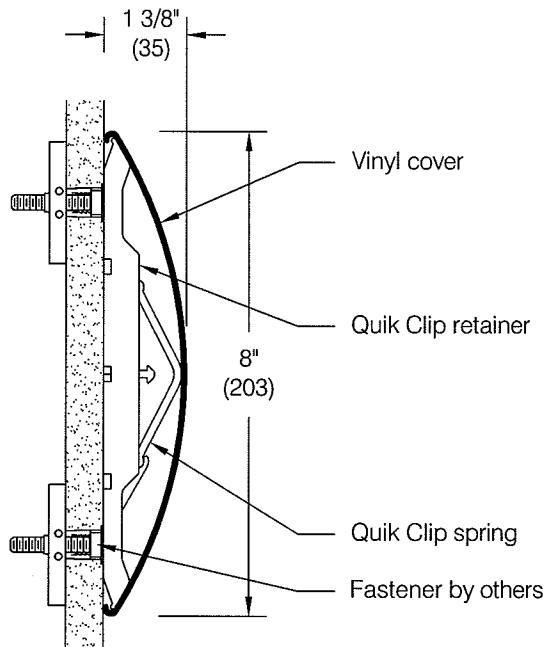

This installation instruction is applicable to:

2126.1

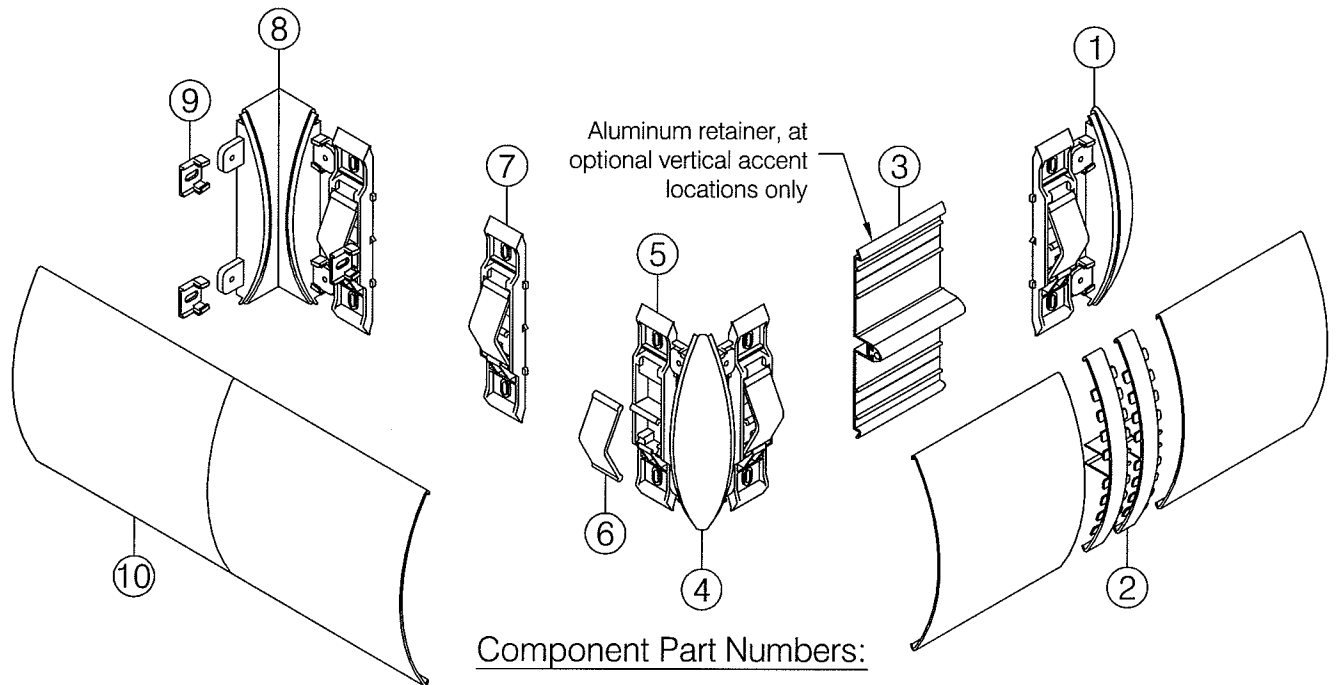

### Component Part Numbers:

- 1.) Left/right end cap with spacers
- 2.) Vertical accent (optional)
- 3.) Aluminum retainer (at optional accents only)
- 4.) Outside corner with spacers
- 5.) Quik Clip retainer
- 6.) Quik Clip spring
- 7.) Quik Clip spring and clip assembly
- 8.) Inside corner with spacers
- 9.) Accessory spacer
- 10.) Vinyl cover

**Step 1:** Determine top of wall guard height and snap a chalk line 4" below to locate centerline of wall guard and to provide a reference line for locating WG-7C Quik Clip retainers, see **fig 1**.

**Important:** Store material in a clean dry place where the temperature is maintained above 50°F (10°C). Walls and rooms should be maintained at a minimum of 65°F (18°C) for at least 48 hours prior to installation. Acclimate materials to normal building conditions for at least 24 hours before cutting and installing.

**Step 2:** Each Quik Clip retainer consists of a base or "Clip" and an impact cushion or "Spring" shipped separately, see **fig 2**. Secure clips to wall by aligning the molded location pointers in the clip with the chalk line, see **fig 3**. While the clip may be installed either end up it is recommended that the spring socket be oriented down, see **fig 8**.

*Note:* A continuous metal backer plate should be used in all drywall installations to allow freedom in the left-to-right placement of the Quik Clip. In the absence of a backer plate align each clip with a metal stud. When necessary a clip may be installed away from a stud or backer plate using the appropriate hardware, see **step 4** below.

**Quik Clip must be:**

- Spaced not to exceed 16" on center
- Located adjacent to end cap and corner accessories, see **step 3**
- At each snap-on cover butt-joint, see **fig 7**

**Step 3:** A Quik Clip must be installed adjacent to each molded accessory. Begin by installing a spacer on each of the accessory mounting tabs, see **fig 4**. The Quik Clip has four accessory alignment tabs used to facilitate positioning of the molded components with respect to the clip, see **fig 5**. Temporarily locate the accessory and Quik Clip combination by holding them temporarily in their desired position. Remove the accessory and fasten the Quik Clip in place. It is also possible to locate the clip by measuring 4 3/16" to 4 1/4" from the outer edge of the desired accessory location or 1" to 1 1/16" from the inner edge, see **fig 6**.

*Note:* It is critical to install the clip and the accessory perpendicular to the chalk line to ensure a proper fit with the square cut vinyl cover.

**Step 4:** Secure Quik Clip assemblies to wall with the appropriate hardware according to wall condition.

**Suggested hardware :**

- Drywall with metal backing : #8 Drill point drywall screw or #8 pan head or hex washer head sheet metal screw.
- Drywall without stud or backing : Plastic Alligator<sup>®</sup> insert with #8 pan head or hex washer head sheet metal screw or 3/16" Toggler<sup>®</sup> brand toggle bolts with pan head machine screw.
- Masonry : Plastic Alligator<sup>®</sup> insert with #8 pan head or hex washer head sheet metal screw or 3/16" hex washer head Tapcon<sup>®</sup> (or similar fastener).

**Step 5:** Secure the accessory component in place using the Quik Clip alignment tabs as a guide. Be certain to adjust the accessory as required to ensure it is square with the chalk line. Install with hardware described in **step 4**.

**Step 6:** Double check to ensure all springs are snapped in place.  
*Note:* Install spring by snapping ball of spring into socket provided in clip. The easiest method is to locate the ball opposite the socket against the "stops" provided in the clip and snap the ball into the socket by pressing the crown of the spring both down and toward the socket, see **fig 8**.

**Step 7:** If optional vertical accents are being used snap fit them on aluminum retainer in locations desired. If accents are being used side-by-side slide them together after they are snapped in place so that the interlocking teeth pass under the next accent in sequence. The teeth will interlock properly only when all accents are aligned the same way, see **fig 9**. Aluminum retainer length to accommodate accents and 2" of vinyl cover on both sides of accents.

**Step 8:** Measure between accessories, including optional vertical accents where used, and cut the vinyl cover. Miter cut the cover for all special angle corners not accommodated by the molded accessories. Install a Quik Clip retainer centered at each butt-joint location, see **fig 7**.

**Important:** All cuts must be square and deburred.

**Step 9:** Snap the cover in place.

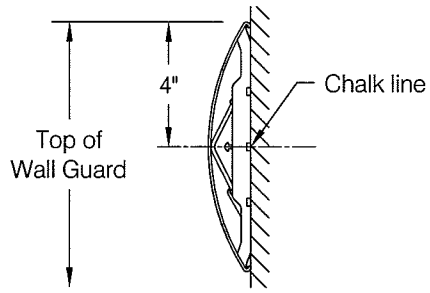


fig 1

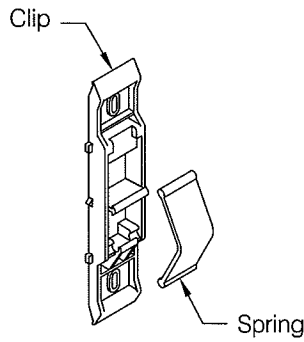


fig 2

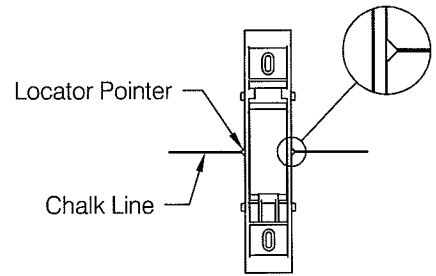


fig 3

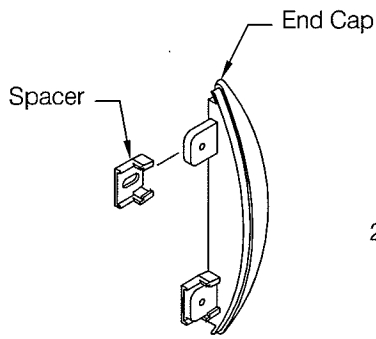


fig 4

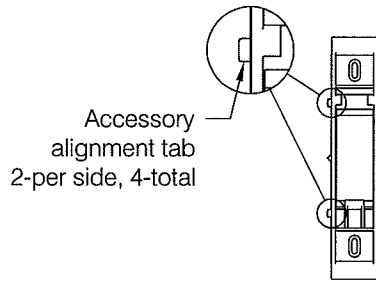


fig 5

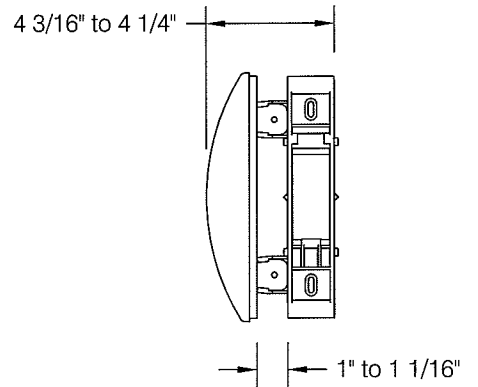


fig 6

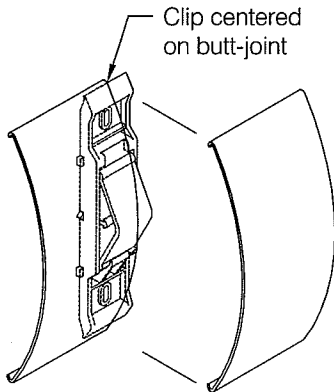


fig 7

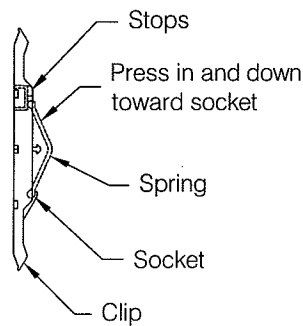


fig 8

At locations with multiple vertical accents, slide interlocking teeth together to form a butt joint seam



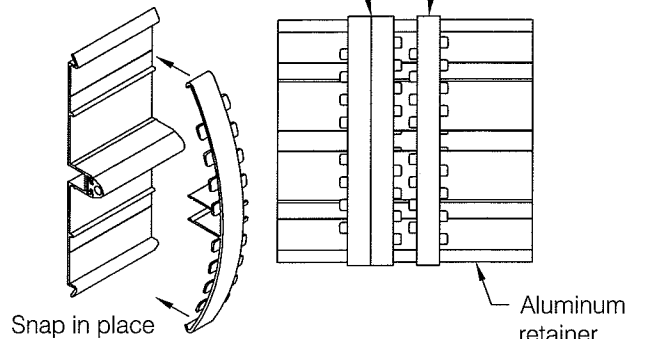


fig 9


## Cutting Adjustment Diagrams and Schedule

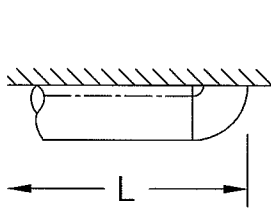

End Cap

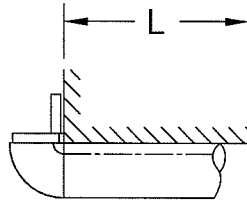

Outside Corner

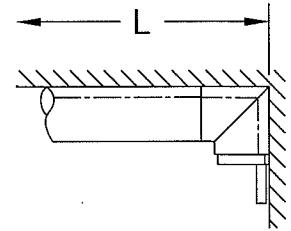

Inside Corner

### Vinyl Cover

End Cap	L - 1 7/16"
Outside Corner	L - 0"
Inside Corner	L - 1 3/4"

Important: install Quik Clip retainers and molded accessories before cutting the snap-on cover.

## Minimum Layout Configurations

